

HuGen FL Rotation Exp O3MOS

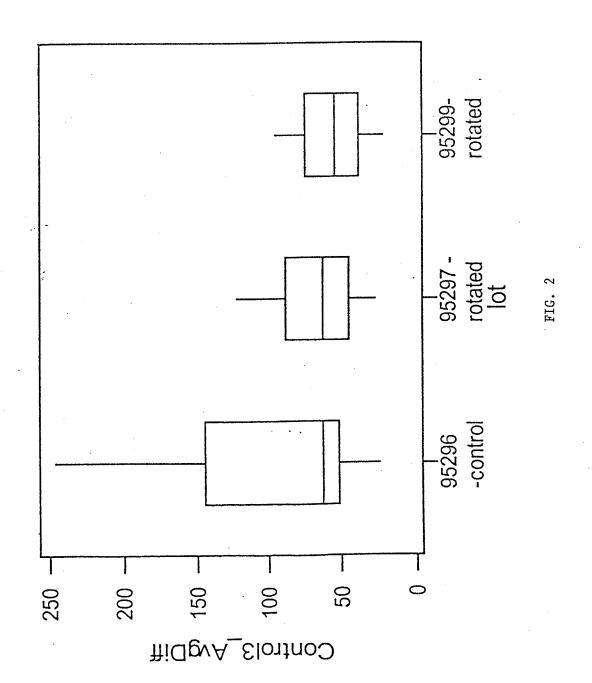


HuFL - Rotation Exp O3MOS

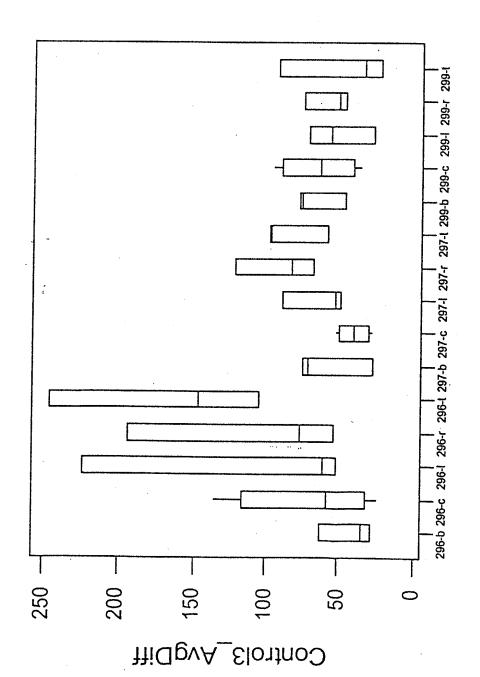

lot-zone

FIG. 3

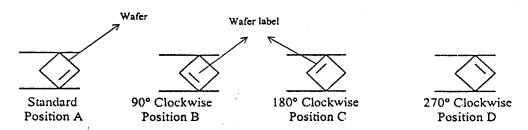

The position notations above are used in the rotation prompts on the computer screen. By using these notations the input paddle of the MOS can be labeled A, B, C and D at the sections where the wafer label is supposed to be facing. That way when a certain position is prompted the operator can match the positioning of the wafer label with the letter on the MOS input paddle.